

iPULL Lite - Sporting Clays User Guide

iPull is a wireless, target release controller for Sporting Clays.

Each unit has a built-in RFID card system for "Pay and Play". iPull controller is placed at each shooting station. The card must be attached to the iPull. Each target released is counted on the card.

When used with cards prepared with iPull Manager Lite software, iPull can only release manually from two traps.

iPull can release singles A, B, and pair A+B. The card can be programmed with a Solo-Delay. With *SoloDelay* iPull can release a "Timer" Report A>B.



It's that simple:

1. **At the office:** Get a card at the club's office. The card is usually loaded with more targets than required for the course. When you are done shooting, you pay based on the number of targets used less a discount for some extra targets. If you are shooting alone ask for a Solo-Delay.
2. **At the Shooting Stand:**
 - 2.1. **Wakeup:** When arriving at a shooting station, observe the iPull display: If the displays indicates the unit is in "SLEEP MODE", press and quickly release the [⊙] key. The unit will wake in "Payment mode" showing the station information on the display.
 - 2.2. **Attach the card:** Place the card on the gray area on the keypad or insert it into the card holder on the back of the iPull. You will see the balance of targets on the top line of the display. The second line shows which trap(s) is released by each key.
 - 2.3. **Release Targets:** press keys to release targets, the balance on the card counts down.
If a SoloDelay is programmed on the card, after pressing a key, the LED(s) of the respective target will flash rapidly for the duration of the delay.