



R-4300 Receiver Troubleshooting Guide

When power is supplied to the receiver, does the green LED come on? Yes Ňο Does the red LED come Check the plug connection Check dip switch on for 1 second or click for corrosion and contact -Nosettings when a signal is sent from Check the wire for damage Check message the transmitter? ☐ Check trap machine for format power (good battery?) ☐ Check transmitter ☐ Check the receiver for Sometimes settings Yes water damage If everything checks out. please send equipment in If everything checks out, please Check the plug for repair send equipment in for repair connection for corrosion and Check antennas contact ☐ Check the wire To solve distance for damage issues, mount the receiver 3-4 feet off If everything checks out, the ground with the please send equipment in for repair antenna pointing up **Contact**

Please call us with any questions. Your satisfaction is our priority.

Call toll free:

1 800 987-6749, Monday-Friday 8:30am-4:30pm EST

Website:

http://www.longrangellc.com

